GEO LASER Messtechnik

= 電源開關
按一下:開機。
(若已開機則重新開始
單次測量)
長按一下:關閉電源。
(五分鐘沒收到任何訊號
也會自動關機)

0 =歸零按鈕
快速按兩下:以目前位置規零

Mem =向上移動選項
=測量時，記憶量測值。

Del =向下移動選項
=測量時，刪除量測值。

Menu OK =進入選單畫面
=確認選項

=燈關開關

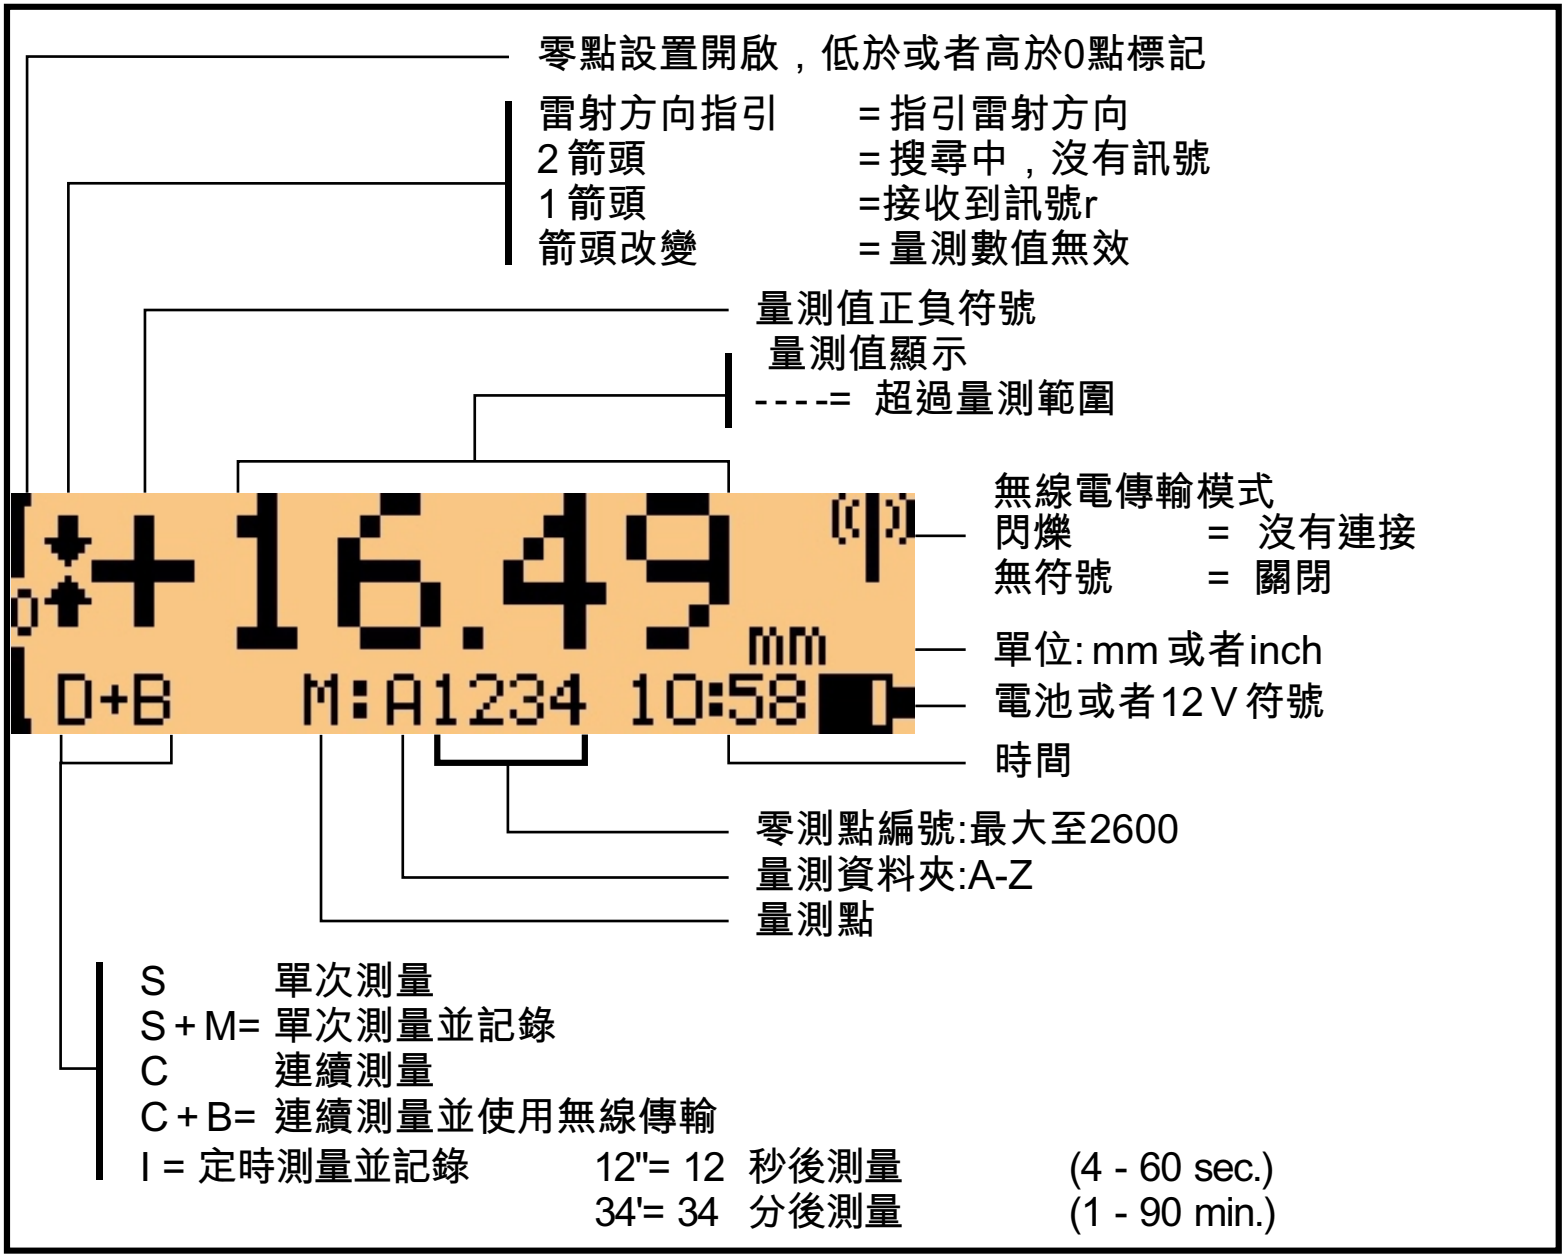

選單內容

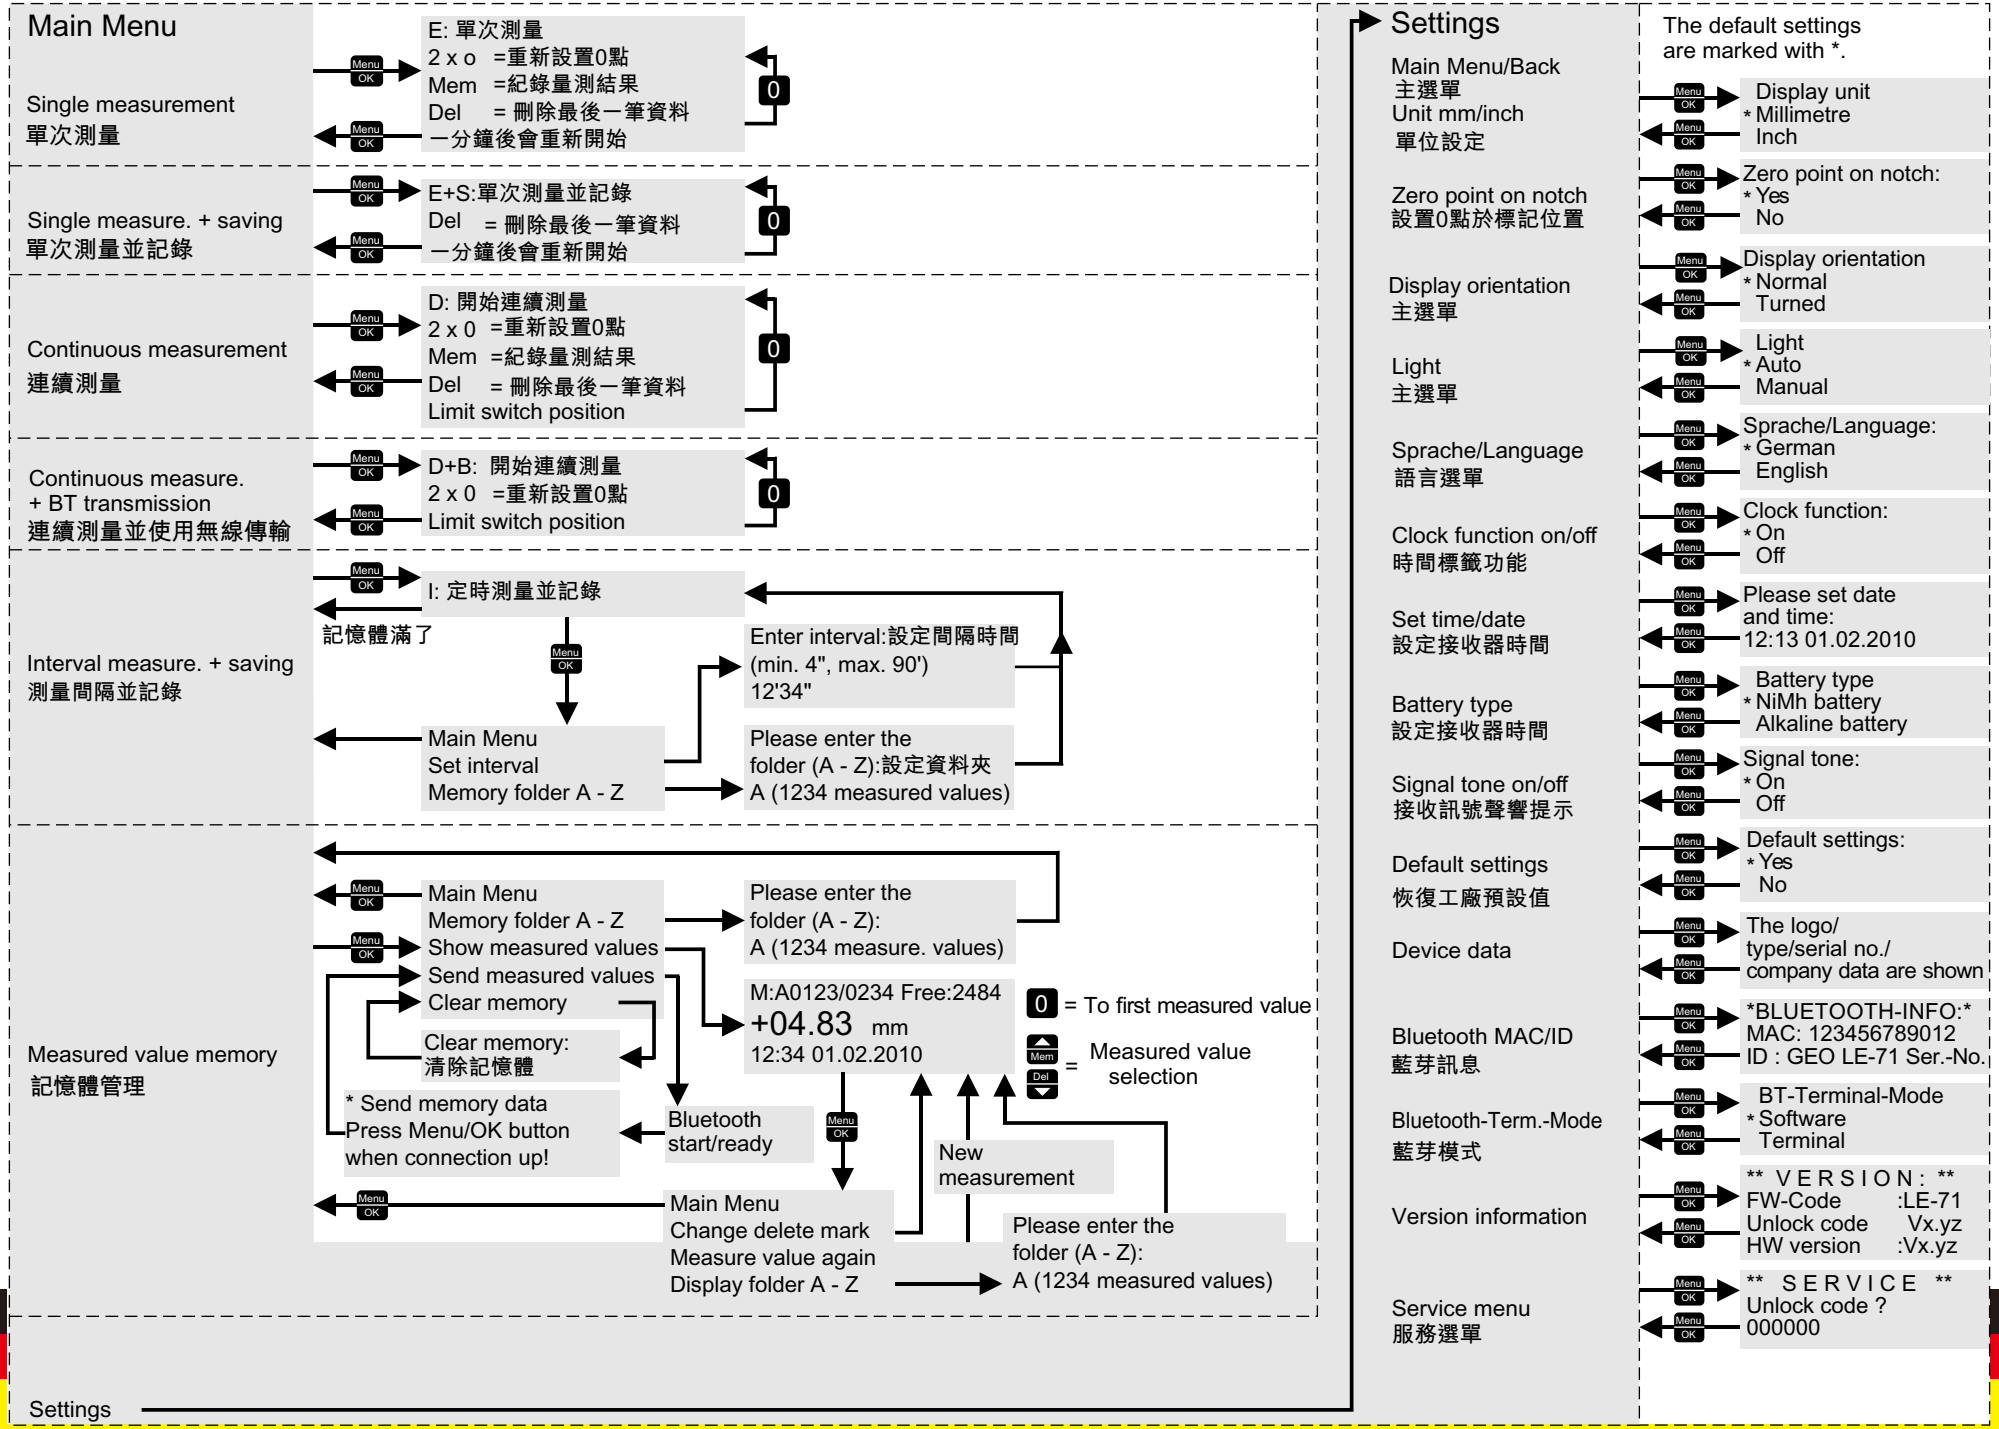
Main Menu
Single measurement
單次測量
E: 單次測量
2 x o =重新設置0點
Mem =紀錄量測結果
Del = 刪除最後一筆資料
一分鐘後會重新開始
Single measure. + saving
單次測量並記錄
E+S:單次測量並記錄
Del = 刪除最後一筆資料
一分鐘後會重新開始
Continuous measurement
連續測量
D: 開始連續測量
2 x 0 =重新設置0點
Mem =紀錄量測結果
Del = 刪除最後一筆資料
Limit switch position
Continuous measure.
+ BT transmission
連續測量並使用無線傳輸
D+B: 開始連續測量
2 x 0 =重新設置0點
Limit switch position
Interval measure. + saving
測量間隔並記錄
I: 定時測量並記錄
記憶體滿了
Main Menu
Set interval
Memory folder A - Z
Enter interval:設定間隔時間
(min. 4", max. 90')
12'34"
Please enter the
folder (A - Z):設定資料夾
A (1234 measured values)
Measured value memory
記憶體管理
Main Menu
Memory folder A - Z
Show measured values
Send measured values
Clear memory
Clear memory:
清除記憶體
Please enter the
folder (A - Z):
A (1234 measure. values)
M:A0123/0234 Free:2484
+04.83 mm
12:34 01.02.2010
= To first measured value
= Measured value selection
* Send memory data
Press Menu/OK button
when connection up!
Bluetooth
start/ready
New
measurement
Main Menu
Change delete mark
Measure value again
Display folder A - Z
Please enter the
folder (A - Z):
A (1234 measured values)
Settings
Settings
The default settings
are marked with *.
Main Menu/Back
主選單
Unit mm/inch
單位設定
Display unit
* Millimetre
Inch
Zero point on notch
設置0點於標記位置
Zero point on notch:
* Yes
No
Display orientation
主選單
Display orientation
* Normal
Turned
Light
主選單
Light
* Auto
Manual
Sprache/Language
語言選單
Sprache/Language:
* German
English
Clock function on/off
時間標籤功能
Clock function:
* On
Off
Set time/date
設定接收器時間
Please set date
and time:
12:13 01.02.2010
Battery type
設定接收器時間
Battery type
* NiMh battery
Alkaline battery
Signal tone on/off
接收訊號聲響提示
Signal tone:
* On
Off
Default settings
恢復工廠預設值
Default settings:
* Yes
No
Device data
The logo/
type/serial no./
company data are shown
Bluetooth MAC/ID
藍芽訊息
BLUETOOTH-INFO:
MAC: 123456789012
ID : GEO LE-71 Ser.-No.
Bluetooth-Term.-Mode
藍芽模式
BT-Terminal-Mode
* Software
Terminal
Version information
** V E R S I O N : **
FW-Code :LE-71
Unlock code Vx.yz
HW version :Vx.yz
Service menu
服務選單
** S E R V I C E **
Unlock code ?
000000